



TO SET UP TP POLARITY IN A VERSION ONE ATOM

1. Select MENU.
2. High Light SYSTEM INSTALLATION.
3. Select TRANSPONDER SET UP.
4. OK.
5. Select POLARIZATION.
6. CHANGE VERTICAL to HORIZONTAL.
7. OK, then exit three times.

TO CHANGE LNB FREQUENCY

1. MENU
2. SYSTEM INSTALLATION
3. SELECT ANTENNA CONFIGURATION
4. OK
5. SELECT OPTUS B1
6. OK.
7. Use channel button on remote and select LNB FREQUENCY
8. Select a new frequency by using either volume + or – buttons
9. OK to store and EXIT button three times.

TO ADD A NEW TP FREQUENCY OR TO SCAN AND FREQUENCY IN THE LIST.

1. MENU
2. SYSTEM INSTALLATION OK
3. TRANSPONDER SET UP
4. OK
5. Select a frequency in the list
6. OK
7. Select TP Search
8. OK
9. OK to store
10. Exit three times.
11. OR, Select the Green Button to add a new frequency.
12. Add symbol rate 22500
13. FEC AUTO
14. TP Search OK
15. OK to store and exit three times.