



20.06.07

SET UP INSTRUCTION FOR THE NEW SATMAX-plus RECEIVER

This new version receiver requires no pin code to activate any menus and is factory set a LNB frequency of 11.300MHz.

Simply select the MENU button and select AUTOMATIC SEARCH.

Press the RED Audio button on the satellite receiver remote control.

If there are no channels loaded please now select ADVANCED INSTALLATION.

You will see two windows on the television screen.

FREEVIEW is high lighted. Press the Blue Vol + button and select your new LNB Frequency of 10.750MHz.

You will now be able to view the quality bar graph with an indication of signal strength.

Usually this is 50 percent or more.

Now just press the RED Audio button and the receiver will scan automatically. Press OK to store. Press EXIT twice.

Now you can enter the EDIT menu and move your programs to the correct numerical position. Press the RED audio button, high light the program you wish to move and go OK.

Now scroll this program to the new selected number and press the RED button again.

Repeat this process and once completed press the Exit button twice.