


TELESTAR SR 2HC Instructions

Set up instructions from new:

- " Press Menu
- " Change language to "English" with volume up or down buttons
- " Select ports A,B,C,and D to None
- " OK
- " Select Satellite to "Newsat 010.0E"
- " Select LNB to either 10.750 or 11.300 depending on your LNB LOF. With volume buttons
- " Select Search all Types to FTA
- " Select Manual Search with "RED" button on Remote control.
- " Select "Newsat 101.0E"
- " Network to Search to "ON"
- " Frequency to 12483
- " Symbol Rate 22500
- " Polarization to "Horizontal"
- " OK
- " The receiver will load both 12483 and 12456 automatically.
- " Time Setting, Select System Management.
- " Timer Setting
- " Local Time to 0 Hours
- " Summer time to OFF
- " OK and OK again to SAVE.

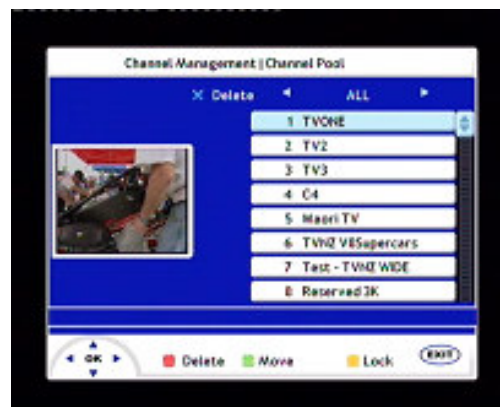

To Move Channels in the Program List

- " Press Menu
- " Channel management, OK
- " Select Green button on remote
- " High light the program to be moved, OK, two small arrows appear beside this program
- " Scroll with PR+ or PR- Buttons to the new position
- " OK
- " Exit then OK to SAVE.
- " Please note that if you install a new pass word we will not be able to enter the receiver to service it if you can not remember it. Always leave it at 0000. Or 5565.
- " If you have pressed the MENU button and a window appears asking for a password please press the BACK button.

Favorites:

Apart from the initial program list, you can create 6 different favorite lists. There you can choose the programs in your individual order.

In Menu 'Program-Administration': Choose FAVORIT
Choose the list you want to edit with the FAV-Key
Now you can search for your favorite channel using the PROGRAM UP/DOWN-Keys.
Press OK to confirm your choice. A heart will appear next to the selected channel.




Using the PROGRAM RIGHT/LEFT-Keys, you can sort the whole list or the channels alphabetically. That makes the search for channels easier. With the red key you can put all programs in one favorite list; with the green key you can delete all programs of the favorite list.

After having completed the changes, exit the Menu with the BACK or EXIT-Key.
Press OK in the appearing information box to save all changes.
With the BACK-Key you get a step backwards in the Menu

Set the Time

The time shown on your receiver is synchronized with the received program. Here you can program a new time zone or shift between summer and winter time, if necessary. Set to Zero hours for NZ and set summer time to suit daylight saving

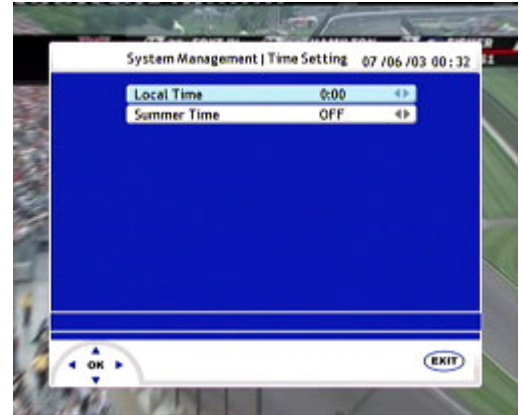

Electronic Program Information EPI

The EPI-Function (Electronic Program Information) is very useful to get a quick overview over the TV-program and the contents of the program.


- " Switch on your TV and your Receiver.
- " Press EPI-Key on your remote control.
- " You see the program information and a small section in which the ongoing program is shown as a PIG (picture in graphic). You also see the program name and the title of the ongoing TV-program.
- " Mark the program of which you want to have EPI-information with the Arrow-Keys UP/DOWN. You see now the selected program in the little TV-picture and the EPI will be shown.
- " Pressing the Arrow-Keys RIGHT/LEFT you get information about the following or the previous programs.
- " Pressing the INFO-Key you get detailed information about the selected program; pressing the OK-Key you set the timer for this program
- " This function is only available if you have a suitable VCR connected to the VCR Scart connector.

With the EXIT or BACK-Key you exit the EPI Menu

INSTALLATION:

Press MENU, press OK. And select Manual Installation only. You can change your LNB frequency and new TP frequency in this menu. Do not change any other parameters in this menu unless your are familiar with what you are changing.

To add a new TP frequency you can write directly over the frequency in this menu. DO NOT factory default this receiver.

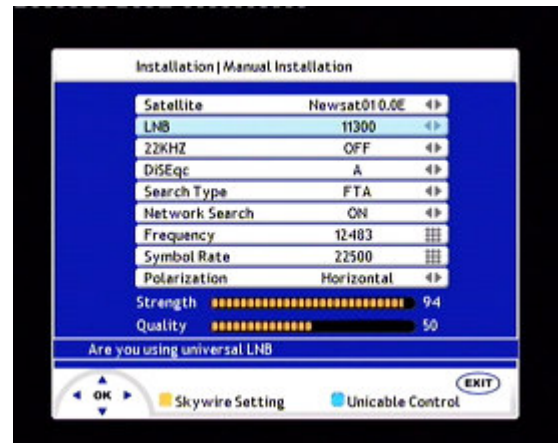

CHANNEL MANAGER,

To Move a program or to Delete a program select OK, Select CHANNEL POOL and OK. High light the program you wish to MOVE or DELETE and press OK. Press the Green button to MOVE or the RED button to DELETE. EXIT when finished.

FAVIORITE:

Select Favorite and press OK. Press the RED button to Select ALL or just OK the high lighted program and EXIT. A screen will now ask you to save, press OK.

To change general settings, system setting, AV setting and TIME settings use SYSTEM MANAGEMENT and high light the menu you wish to change.

For more information please contact SATMAX
www.satmax.co.nz Email office@satmax.co.nz
Ph 03 3435565